

H256815 PIPPIN CHANDELIER

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1. STEP 2. STEP 3. STEP 4. STEP 5. STEP 6.	Thread the wire through stems and twist tightly onto body. Keep adding additional stems required. Slide in the canopy to the stem. And thread the swivel into the top end of the stem set. Attach the arm to the metal ball then secure with the ring. Pull the wires out from the outlet box, and install mounting plate onto the outlet box using the (2) mounting screws. Strip the fixture wires ½" long at the ends. Trim excess wire to min 6" beyond stem, strip to 5/8" and twist. Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire to green screw on the mounting plate.	STEP 8. STEP 9. STEP 10. STEP 11.	both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape. Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could cause a dangerous short circuit. FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH! Carefully place connections back into the outlet box. Mount the canopy to the mounting plate and secure with mounting nuts. Install the lamps. The fixture is rated for 40 watt type G lamp. DO NOT EXCEED RECOMMENDED WATTAGE!
STEP 7.	Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten	STEP 12.	Restore power to the circuit at breaker or fuse box.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store.


CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.



H256815 PIPPIN CHANDELIER

ASSEMBLY AND MOUNTING DIAGRAM

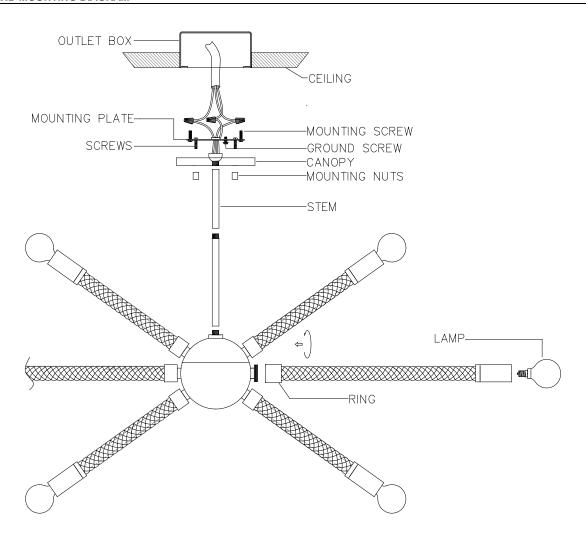

WIRE NUT/TAPING DIAGRAM

