

# 109-67 DOLCE INSTALLATION INSTRUCTIONS



## **⚠ WARNING**

**DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE.  
READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**

## **⚠ CAUTION**

- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
- INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. **DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING.** In regular circumstances the **BLACK** wire will be the "Hot" lead and the **WHITE** wire will be the "Neutral" or "Common" lead. A **GREEN** or **BARE COPPER** wire is the "Ground". In older buildings, it is always good practice to reconfirm the polarity of the wiring.

## **NOTICE**

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and caring for this lighting fixture.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

### **INSTALLATION PREPARATION**

1. Remove the fixture, glass and parts bag(s) from the carton.

#### **NOTICE:**

**Before discarding the carton, double check the contents to make certain that all parts are found.**

2. Remove the end balls from the front of the fixture.  
Separate the back pan from the front of the fixture.


### **FIXTURE INSTALLATION**

1. Attach the back pan to the outlet box.  
(Double check to ensure that it is level.)
2. Mark the locations of the additional mounting holes.  
Remove the back pan from the outlet box.
3. Drill the holes for the anchors or pilot holes for the screws.  
Install the anchors, if used.
4. Fasten the back pan to the outlet box and the wall.
5. Fasten the ground wire to the green or bare copper wire in the outlet box (if outlet box is plastic) or the green screw on the crossbar.



#### **WARNING**

**Never fasten the ground wire to the black or "hot" wire!  
Failure to follow this instruction could result in serious injury or death!**

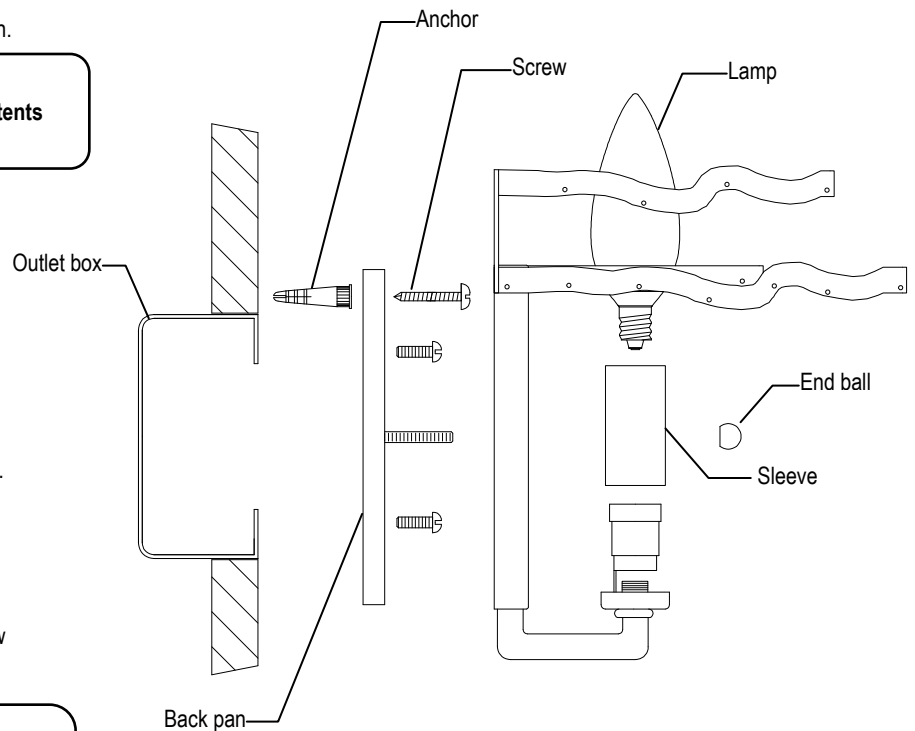

- Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.



**⚠ WARNING**  
**Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!**

- Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 4.
- Using the end balls, fasten the fixture to the back pan.
- Place the sleeves over the sockets.
- Attach the capiz and crystal chains at the locations indicated on the illustration below.
- Install the lamps (light bulbs).  
 NOTE: This fixture is rated for 60 watt type B, BA, C or CA lamps.

**⚠ WARNING**  
**DO NOT EXCEED RECOMMENDED WATTAGE!**

- Restore power to circuit at breaker or fuse box.

