



**mitzi**  
HUDSON VALLEY LIGHTING

## H516806 H516808 H516815 BAILEY CHANDELIER

---

### ASSEMBLY AND MOUNTING INSTRUCTIONS

---

#### GENERAL

---

- **WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED**
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN
- **FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH**
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.
- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

---

#### INSTALLATION

---

- STEP 1.** Pull the wires out from the outlet box, and install mounting plate onto the outlet box using the (2) mounting screws.
- STEP 2.** Thread the wire through stem and twist tightly onto body.
- STEP 3.** Choose the length of the chain you need. (to remove excess chain section, use pliers to bend link open)
- STEP 4.** Thread the fixture wire and the ground wire through the chain, collar, canopy and top loop assembly. connect the chain to the loop and top loop.
- STEP 5.** Trim excess wire to min 6" beyond stem, strip to 5/8" and twist.
- STEP 6.** Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire to green screw on the mounting plate.
- STEP 7.** Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape.
- STEP 8.** Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could cause a dangerous short circuit.  
**FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH!**
- STEP 9.** Carefully place connections back into the outlet box.
- STEP 10.** Attach the canopy to the mounting plate by inserting the top loop, then secure it with collar.
- STEP 11.** Attach the finial onto the bottom of the fixture.
- STEP 12.** Install the lamps. The H516806 and H516808 is rated for 60 watt type B lamp, the H516815 is rated for 40 watt type B lamp.  
**DO NOT EXCEED RECOMMENDED WATTAGE!**
- STEP 13.** Restore power to the circuit at breaker or fuse box.

---

#### DIMMING

---

The fixture can be controlled by a wall dimming device. Only use triac /electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store.

---

#### CLEANING

---


Please clean with a soft, dry cloth ONLY! Do not use cleaning products.



**mitzi**  
HUDSON VALLEY LIGHTING

**H516806 H516808 H516815 BAILEY CHANDELIER**

**ASSEMBLY AND MOUNTING DIAGRAM**

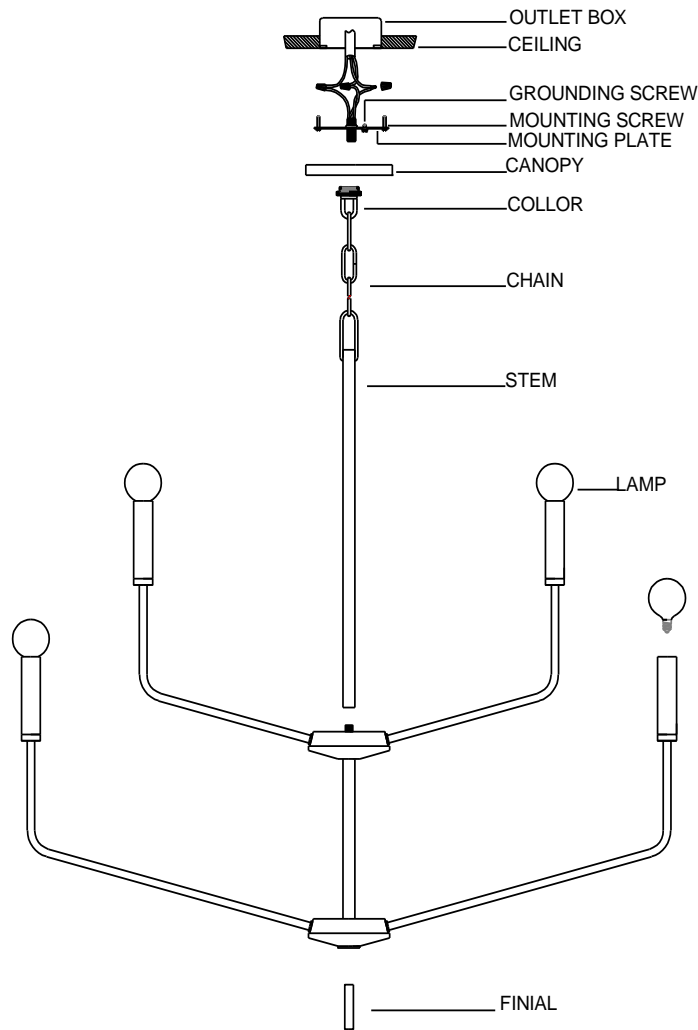

**WIRE NUT/TAPING DIAGRAM**

