



SMARTConnect Kit



Set Up Instructions

Before Getting Started...


The 12 inches of Tubing nearest to the end without the Tubing Connector should be straight and not curved for optimal performance of the SMARTConnect Kit. If this segment of the Tubing is curved when removed from packaging, it can be straightened via the following process:

- (1) Submerge the 12 inch segment in boiling water for 30 seconds, then remove. **DO NOT HANDLE PORTION OF TUBING THAT WAS SUBMERGED AS IT WILL STILL BE HOT.**
- (2) Using towels or oven mitts to protect hands, grasp the 12 inch segment and hold taut under cold, running water for another 30 seconds.

For additional information or troubleshooting, or to contact us, please visit www.direct-dispense.com.

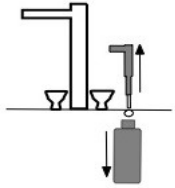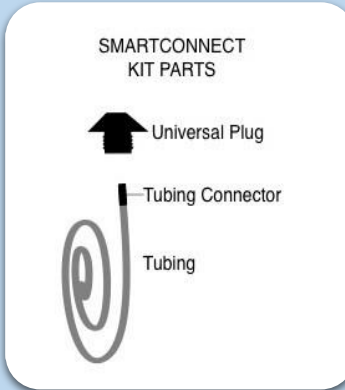


1. Remove existing reservoir bottle if one has been installed. Then lift dispenser off of countertop.

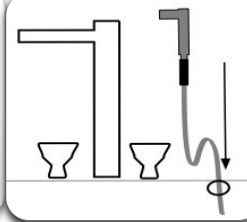


5. Replace dispenser on countertop, allowing Tubing to first drop through the opening



2. Remove dip tube from dispenser base by pulling it off firmly.

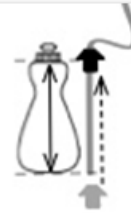

6. Locate free end of Tubing below sink and lubricate end generously with water and soap. Push lubricated Tubing through hole in center of Universal Plug. If Tubing is difficult to insert, use additional water and soap to lubricate. Once inserted, slide Universal Plug upward so that free end of Tubing will reach base of soap bottle when Universal Plug is inserted into soap bottle.

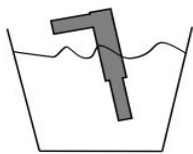


3. Rinse dispenser to remove any soap residue, then dry thoroughly.


DISPENSER MUST BE COMPLETELY CLEAN AND DRY BEFORE PROCEEDING



7. Insert Tubing with Universal Plug into soap bottle. Press Universal Plug firmly into mouth of soap bottle to ensure secure fit. For best results, free end of Tubing should extend exactly to base of soap bottle and should not bend or curl upward from base.



4. Push Tubing Connector onto base of dispenser until it covers 3/8 inch of dispenser base. This may require some manipulation depending on specific shape and size of dispenser.

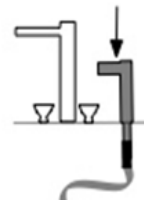

8. Pump dispenser until soap is dispensed.